



## **Tonie and Toniebox Instructions**

### **Wi-Fi**

We've already downloaded the contents of all of our Tonies to our Tonieboxes. This means you don't need a Wi-Fi connection to use them.

If you have your own Toniebox, your Toniebox will need to be connected to your home's Wi-Fi network to download and play our Tonies.

### **Charging**

- An orange LED light means low battery.
- Plug the included charger into a power outlet and put the Toniebox on the magnetic charger base.
- A solid green LED on the Toniebox only indicates that the Toniebox is turned on and ready to play Tonies but doesn't necessarily indicate a completely full battery.
- When the Toniebox's battery is completely empty, it will take about 3 hours to fully recharge it.
- Once the battery is fully charged, the Toniebox can be actively used for up to 7 hours.

### **How to turn on the Toniebox & control its volume**

- Turn on the Toniebox by pinching one of the ears or placing it on its charging station.
- Pinch the big ear to turn up the volume & pinch the little ear to turn it down.

### **Playing and pausing**

Once the light on the top of the Toniebox turns green, place a Tonie on top. To pause the story or song, remove the Tonie from the Toniebox. When you place the Tonie back on the Toniebox, it will pick back up from the same spot if another Tonie hasn't been played in between.

### **Skipping forward or backward**

To skip back and forth between chapters, tap the Toniebox on its side. To fast-forward or rewind, tilt the box to one side.